

MODEL	LIST PRICE	MODEL	LIST PRICE	MODEL	LIST PRICE	MODEL	LIST PRICE
<b>HE SERIES</b>		HL - 281A	112.13	HS - 115A	71.97	HS - 250A	85.18
HE - 1A	104.61	HL - 283A	112.13	HS - 118B	68.79	HS - 252A	85.18
HE - 5A	89.77	HL - 292G/D	112.42	HS - 121A	72.82	HS - 254A/B	85.18
HE - 6A	95.04	HL - 299G	93.18	HS - 123A	72.92	HS - 255B	85.18
HE - 7A	96.17	HL - 304E-F-WX	95.99	HS - 125B	81.77	HS - 256A	85.18
HE - 8A	106.68	HL - 311A	99.84	HS - 128B	73.61	HS - 257A	78.43
HE - 9B/C	130.17	HL - 314G/F	118.22	HS - 135C	85.72	HS - 260A	85.18
HE-10A	117.41	HL - 320B	109.80	HS - 136C	81.41	HS - 262A	95.34
HE-11A	134.19	HL - 321A	110.12	HS - 138B	71.17	HS - 262B	95.34
HE-12A	120.63	HL - 324A	91.03	HS - 142A	Use HS-179B	HS - 263A	28.57
		HL - 327D	117.72	HS - 144D	85.93	HS - 265A	86.94
		HL - 329C	100.00	HS - 151B	84.33	HS - 266A	86.94
<b>HR SERIES</b>		HL - 334A/B/AB	117.51	HS - 157A	81.63	HS - 267A	85.70
HR - 181B	267.06	HL - 339A	107.78	HS - 158F	81.38	HS - 268A	81.59
HR -191G	267.06	HL - 342A	117.73	HS - 161A	72.65	HS - 269B	83.11
HR - 192A	267.06	HL - 348E	121.04	HS - 163A	69.84	HS - 271D	79.44
HR - 194A	267.06	(Available only through E.C)		HS - 168A	78.75	HS - 273A	82.65
HR - 196A	267.06	HL - 351A	124.58	HS - 172B	85.63	HS - 274E	87.79
HR - 197A	267.06	HL - 352A	85.16	HS - 175D/F/G/H	95.53	HS - 275A/B	98.99
HR - 198A	267.06	HL - 355A/B/C/D	125.01	HS - 175K/L/M/N	95.53	HS - 276A/B/C/D	99.11
		HL - 357A/B	87.81	HS - 176A	103.03	HS - 277A	81.53
<b>HK SERIES</b>		HL - 360A/B/C	100.14	HS - 179B	84.71	HS - 278G	95.53
HK - 5C	56.83	HL - 363A/B/C	124.08	HS - 181C	70.19	HS - 279A/B/C/D	90.57
HK - 13D	65.52	HL - 364A	107.47	HS - 182C	84.65	HS - 280A/B/C/D	96.00
HK - 15D/E	74.68	HL - 365A/B	103.66	HS - 184A	88.00	HS - 281A/B/C/D	97.66
HK - 16D	74.68	HL - 366A	130.80	HS - 185A	84.65	HS - 282A	81.41
HK - 27B	80.39	HL - 368A	116.84	HS - 186A	78.51	HS - 283B	95.35
HK - 28C	94.96	HL - 369A	93.78	HS - 187A	84.65	HS - 284C/D/E/F	95.31
HK - 38A	Use HE - 8A	HL - 370A	97.24	HS - 189A	73.10	HS - 285A	95.33
HK - 42B	Use HE - 5A	HL - 371A	136.06	HS - 195A	81.87	HS - 286A	95.33
		HL - 372A	114.83	HS - 202A	80.08	HS - 292A	95.33
<b>HL SERIES</b>		HL - 372A	114.83	HS - 203E	84.73	HS - 293A	95.33
HL - 117E	106.71	HL - 374A	125.35	HS - 205A	72.82	HS - 294A	95.33
HL - 141B	98.55	HL - 375A	111.23	HS - 212B	77.79	HS - 295A	95.33
HL - 166B/C	80.32	HL - 380A/B	121.36	HS - 213A	86.68	HS - 295B	96.56
HL - 172B	98.55	HL - 381A	128.17	HS - 215A	58.37	HS - 296A	95.33
HL - 173E	101.28	HL - 382A	108.87	HS - 216C	84.85	HS - 297A	97.13
HL - 176A	93.45	HL - 383A	84.39	HS - 218A	80.86	HS - 298A	97.10
HL - 189F	Use HL-173E	HL - 384A	107.14	HS - 218A	80.86	HS - 298A	97.10
HL - 220AX	104.23	HL - 384B	107.14	HS - 219C	85.07	HS - 299A	95.10
HL - 223A	93.35	HL - 385A	102.52	HS - 220A	75.26	HS - 300A	97.43
HL - 226A	89.20	HL - 386A	107.96	HS - 222B	84.38	HS - 301A	99.41
HL - 229F	110.24	HL - 388A	114.79	HS - 223A/B	70.87	HS - 304A	99.41
HL - 231E	128.79	HL - 390A	106.53	HS - 224A	75.78	HS - 307A	95.08
HL - 232E/F	97.74			HS - 225A	84.38	HS - 309B	101.14
HL - 239B	93.35	<b>HS SERIES</b>		HS - 226A	86.50	HS - 310A	96.23
HL - 256A	109.67	HS - 4D	72.67	HS - 228C	76.01	HS - 310C	101.65
HL - 257A	105.61	HS - 5C	81.04	HS - 230C/D	75.78	HS - 311A	95.75
HL - 261A	110.60	HS - 25B/C	80.44	HS - 232E	84.95	HS - 311C	100.40
HL - 266A	102.49	HS - 28D	72.82	HS - 234B	75.80	HS - 313A	96.23
HL - 268A	106.46	HS - 39B	68.44	HS - 235B	123.97	HS - 313C	102.97
HL - 274E	103.32	HS - 59A	80.77	HS - 236C/D/E	95.23	HS - 315A	144.90
		HS - 60D/E	83.08	HS - 237A	83.19	HS - 315B	108.75
		HS - 87A	81.41	HS - 238B	84.95	HS - 317A	111.10
		HS - 101C	59.58	HS - 239A/B/C/D	95.33	HS - 320A	64.99
		HS - 110B	68.63	HS - 240C	85.05		
				HS - 241A	89.84		



## ORIGINAL EQUIPMENT CARBURETTORS/REPAIR KITS

MODEL	LIST PRICE	MODEL	LIST PRICE	PART NUMBER	BASIC USAGE	LIST PRICE
<b>HT SERIES</b>		HU - 91A	95.04	RK - 15HU		8.49
HT - 5A	122.55	HU - 99C	80.90	RK - 16HU		8.49
HT - 7A	149.33	HU - 100B/D	80.90	RK - 17HU		8.49
HT - 8A	116.57	HU - 101B	92.75	RK - 18HU		8.49
HT - 9A	135.79	HU - 103A	88.08	RK - 19HU		8.49
HT - 11B	146.22	HU - 105A	83.03	RK - 20HU		13.64
HT - 11D	153.53	HU - 106A	87.30	RK - 21HU		8.49
HT - 12B	138.23	HU - 107D	51.26	RK - 22HU		8.49
HT - 12C	149.10	HU - 108C	80.90	RK - 23HU		8.49
HT - 12D	151.75	HU - 112B	54.39			
HT - 12E	153.53	HU - 113B	57.60	RK - 18HS		9.22
HT - 13A	114.29	HU - 114B/D/E	78.54	RK - 19HS		9.22
HT - 14A	125.18	HU - 115B	91.16	RK - 20HS		9.22
HT - 15A	154.99	HU - 116B	95.33	RK - 21HS		9.22
HT - 18A	154.99	HU - 117B	76.69	RK - 23HS		9.22
HT - 20A	108.00	HU - 118A	56.58	RK - 24HS		9.22
		HU - 120A	64.81	RK - 25HS		9.22
				RK - 26HS		9.22
				RK - 27HS		9.22
				RK - 28HS		9.22
				RK - 29HS		9.22
				RK - 30HS		9.22
				RK - 31HS		9.22
				RK - 32HS		9.22
				RK - 33HS		9.22
				RK - 34HS		9.22
				RK - 35HS		9.22
				RK - 1HT		9.19
				RK - 2HT		9.80
				RK - 3HT		9.19
				RK - 4HT		14.34
				RK - 1HE		10.46
				RK - 2HE		10.46
				RK - 3HE		10.46
				RK - 1HW		20.88
				RK - 2HW		20.88
				RK - 3HW		16.82
				RK - 4HW		15.47
				<b>DIAPHRAGM &amp; GASKET SETS</b>		
				DG - 1HK	HK	7.13
				DG - 1HL	HL	7.42
				DG - 4HL/R	HL/HR	8.35
				DG - 5HL	HL	7.42
				DG - 2HS/T	HS/HT	6.04
				DG - 3HS/T	HS/HT	6.04
				DG - 5HS/T	HS/HT	6.04
				DG - 7HS	HS	6.04
				DG - 8HS	HS	6.04
				DG - 9HS	HS	6.04

PART NO.	LIST PRICE	DESCRIPTION	PART NO.	LIST PRICE	USAGE	DESCRIPTION
DG - 10HS	6.04	HS				
DG - 11HS	6.04	HS				
DG - 2HU	6.04	HU				
DG - 3HU	5.86	HU				
DG - 4HU	5.86	HU				
DG - 5HU	5.86	HU				
DG - 6HU	5.86	HU				
<b>SPECIAL KITS</b>			<b>THROTTLE LEVERS</b>			
392 - 501		Use 392 - 502	12B-130	0.59	HL	Throttle Lever
392 - 502	7.87	Choke Valve Kit	12B-178	0.76	HS	Throttle Lever
392 - 504	7.87	Choke Valve Kit	12B-184	0.44	HS	Throttle Lever
392 - 505P	7.87	Choke Valve Kit	12B-221	2.45	HL	Throttle Lever
392 - 506P	7.87	Choke Valve Kit	12B-256	0.48	HK	Throttle Lever
392 - 508P	10.74	Choke Valve Kit	12B-259	0.49	HK	Throttle Lever
392 - 510P	5.96	Choke Valve Kit	12B-289	0.83	HK	Throttle & Choke Lever
<b>LEAK DETECTOR</b>			12B-313	0.83	HK	Throttle Lever
243 - 504	97.01		12B-322	0.74	HK	Throttle Lever
<b>FUEL PRIMERS</b>			12B-363	0.96	HS	Throttle Lever
362 - 501	6.16		12B-392	0.52	HK	Throttle Lever
362 - 504	6.16		12B-436	1.70	HS	Throttle Lever
<b>SERVICE VIDEO</b>			12-1154	5.33	HL	Throttle Lever
V-VID	26.78	(Net Price)	12-1156	5.26	HS	Throttle Lever
<b>CD ROM SERVICE MANUAL</b>			12-1158	4.56	HS	Throttle Lever
CD-ROM	10.71	(Net Price)	12-1164	3.29	HS	Throttle Lever
<b>FILTERS</b>			12-1167	3.29	HL	Throttle Lever
<u>Zinc body/felt element pro.</u>			12-1180	7.59	HL	Throttle Lever
OW - 497 - P	2.92	fuel line ID 3/16"	12-1204	4.04	HL	Throttle Lever
OW - 802 - P	2.41	fuel line ID 3/16"	12-1205	3.83	HU	Throttle Lever
OW - 497 - D	28.92		12-1208	2.56	HO	Throttle Bracket Linkage
OW - 497 - Z	69.63		12-1212	6.26	FO/HO	Throttle Bracket Assembly
OW - 802 - D	23.57		12-1213	8.35	HR	Throttle Lever
OW - 802 - L	107.12		12-1216	7.27	HL	Throttle Lever Assembly
<u>body/porex element std</u>			<b>THROTTLE SHAFTS</b>			
TP - 01 - P	2.14	fuel line 1/8" ID	13-1569	8.91	HL	Shaft & Lever
TP - 02 - P	2.14	fuel line 3/16" ID	13-1586	10.27	HL	Shaft & Lever
<u>body/porex element pro</u>			13-1592	8.76	HL	Shaft & Lever
TP - 04 - P	3.17	fuel line 1/4" ID	13-1639	8.57	HL	Shaft & Lever
TP - 05 - P	3.11	fuel line 1/4" ID	13-1656	13.82	HL	Shaft & Lever
TP - 06 - P	3.11	fuel line 3/16" ID	13-1661	7.09	HS	Shaft & Lever
TP - 07 - P	3.11	fuel line 1/8" ID	13-1662	8.99	HS	Shaft & Lever
FS - 1 - P	11.58	fuel line 3/16" ID	13-1664	10.16	HS	Shaft & Lever
			13-1695	7.48	HS	Shaft & Lever
			13-1714	6.79	HO	Shaft & Lever
			13-1744	6.67	HU	Shaft & Lever
			13-1781	11.07	HS	Shaft & Lever
			13-1838	13.38	HS	Shaft & Lever
			13-1849	8.56	HS	Shaft & Lever
			13-1888	5.35	HK	Shaft & Lever
			13-1893	4.66	HS	Shaft & Lever
			13-1894	15.06	HL	Shaft & Lever
			13-1895	4.92	HS	Shaft & Lever
			13-1897	3.86	HS	Shaft & Lever
			13-1900	2.33	HU	Shaft & Lever
			13-1912	25.81	TC	Shaft & Lever
			13-1932	4.18	HS	Shaft & Lever
			13-1944	6.32	HS	Shaft & Lever

LIST								
PART NO.	PRICE	USAGE	DESCRIPTION	PART NO.	QTY CODE	LIST PRICE	USAGE	DESCRIPTION
<b>THROTTLE SHAFTS</b>				13-2089		7.37	HU	Shaft & Lever
13-1950	5.23	HS	Shaft & Lever	13-2092		5.35	HU	Shaft & Lever
13-1951	3.52	HS	Shaft & Lever	13-2093		11.94	HS	Shaft & Lever
13-1956	4.36	HS	Shaft & Lever	13-2094		5.35	HU	Shaft & Lever
13-1974	9.03	HU	Shaft & Lever	13-2096		7.16	HS	Shaft & Lever
13-1975	6.60	HU	Shaft & Lever	13-2098		5.35	HU	Shaft & Lever
13-1986	6.64	HU	Shaft & Lever	13-2100		8.35	HS	Shaft & Lever
13-1988	6.64	HU	Shaft & Lever	13-2102		11.06	HL	Shaft & Lever
13-1991	8.93	HK	Shaft & Lever	13-2105		10.74	HL	Shaft & Lever
13-2011	4.16	HS	Shaft & Lever	13-2106		4.79	HU	Shaft & Lever
13-2012	6.10	HS	Shaft & Lever	13-2107		10.16	HS	Shaft & Lever
13-2021	17.70	HT	Shaft & Lever	13-2109		12.29	HS	Shaft & Lever
13-2022	5.56	HU	Shaft & Lever	13-2111		8.60	HS	Shaft & Lever
13-2023	8.21	HU	Shaft & Lever	13-2112		8.60	HS	Shaft & Lever
13-2024	12.04	HL	Shaft & Lever	13-2113		10.16	HS	Shaft & Lever
13-2025	11.39	HK	Shaft & Lever	13-2114		8.35	HE	Shaft & Lever
13-2026	4.71	HU	Shaft & Lever	13-2116		8.60	HS	Throttle Shaft
13-2027	3.68	HU	Shaft & Lever	13-2117		8.60	HS	Throttle Shaft
13-2028	5.94	HS	Shaft & Lever	13-2119		11.06	HL	Throttle Shaft
13-2030	3.76	HU	Shaft & Lever	13-2120		8.12	HS	Throttle Shaft
13-2031	4.11	HU	Shaft & Lever	13-2121		8.60	HU	Throttle Shaft
13-2033	11.13	HL	Shaft & Lever	13-2126		12.08	HS	Throttle Shaft
13-2037	10.79	HS	Shaft & Lever	13-2127		8.31	HS	Throttle Shaft
13-2038	7.05	HS	Shaft & Lever	13-2129		15.83	HS	Throttle Shaft
13-2040	5.13	HS	Shaft & Lever	13-2133		6.57	HU	Throttle Shaft
13-2041	14.26	HT	Shaft & Lever	13-2137		5.11		Throttle Shaft
13-2043	8.37	HS	Shaft & Lever	<b>THROTTLE SHUTTERS</b>				
13-2044	4.53	HU	Shaft & Lever	14A-1	X	0.68	HK	Shutter
13-2045	7.57	HU	Shaft & Lever	14A-2	X	1.12	HT	Shutter
13-2047	3.30	HU	Shaft & Lever	14A-4	X	0.65	HU	Shutter
13-2049	5.75	HS	Shaft & Lever	14A-6	X	0.65	HK	Shutter
13-2050	20.93	WB	Shaft & Lever	14A-7	X	0.67	HT	Shutter
13-2054	20.67	WB	Shaft & Lever	14A-9	Use 14A-34			
13-2055	21.07	WB	Shaft & Lever	14A-10	X	0.67	HS	Shutter
13-2058	7.71	HU	Shaft & Lever	14A-11	X	0.67	HO	Shutter
13-2061	6.23	HO	Shaft & Lever	14A-12	X	0.67	HS	Shutter
13-2062	11.33	HE	Shaft & Lever	14A-14	X	1.13	HT	Shutter
13-2065	11.33	HO	Shaft & Lever	14A-16	X	0.67	HU	Shutter
13-2066	10.66	FO	Shaft & Lever	14A-17	X	0.88	WB	Shutter
13-2069	3.99	HS	Shaft & Lever	14A-18	X	1.12	WB	Shutter
13-2070	21.53	WB	Shaft & Lever	14A-19	X	2.08	WB	Shutter
13-2080	6.32	HE	Shaft & Lever	14A-20	Use 14A-34			
13-2081	11.06	HL	Shaft & Lever	14A-23	X	0.65	HS	Shutter
13-2082	6.77	HU	Shaft & Lever	14A-26	X	0.65	HS	Shutter
13-2083	7.71	HU	Shaft & Lever	14A-27	X	1.12	FO	Shutter
13-2084	20.11	HR	Shaft & Lever	14A-31	X	1.12	TC	Shutter
13-2085	16.62	FO	Shaft & Lever	14A-32	X	2.07	HO	Shutter
13-2086	16.14	FO	Shaft & Lever					

LIST					LIST				
PART NO.	QTY CODE	PRICE	USAGE	DESCRIPTION	PART NO.	QTY CODE	PRICE	USAGE	DESCRIPTION
<b>THROTTLE SHUTTERS</b>					15B-329	X	0.59	HL,HS	Screw
14A-34	X	0.65	HL	Shutter	15B-330	X	0.59	HS,HU	Screw
14A-38	X	1.13	TC	Shutter	15B-333	X	0.75	HS	Cover Screw
14A-42	X	1.13	HS	Shutter	15B-343	X	0.93	HL	Screw
14A-43	X	1.80	TC	Shutter	15B-345	X	0.59	HS	Screw
14A-44	X	0.57	HE	Shutter	15B-348	X	0.59	HS	Screw
14A-48	X	1.95	HR	Shutter	15B-353	X	0.59	HU	Screw & Lockwasher
14A-49	X	1.09	WB	Shutter	15B-367	X	1.06	HU	Idle Speed Screw
14A-52	X	2.00	HR	Shutter	15B-370	X	0.59	HK	Screw
14A-53	X	0.88	WB	Shutter	15B-371	X	0.59	HK	Screw
14A-54	X	1.50	HT	Shutter	15B-381	X	2.61	HK	Idle Speed Screw
14A-55	X	1.50	FO	Shutter	15B-401	X	1.86	HK	Idle Speed Screw
14A-58	X	1.13	HS	Shutter	15B-413	X	2.51	HS	Idle Speed Screw
14A-60	X	0.83	HT	Shutter	15B-414	Use 15C-20			
14A-61	X	1.12	HO	Shutter	15B-415	X	1.83	HS	Idle Speed Screw
14A-95	X	4.35	HO	Shutter	15B-416	X	0.60	HS	Screw
14-386	X	0.72		Shutter	15B-417	X	0.60	HS	Screw
14-396	X	0.72	HL	Shutter	15B-441	X	2.96	HK	Idle Speed Screw
14-407	X	0.68	HL	Shutter	15B-468	X	1.68	HU	Idle Speed Screw
14-415	X	1.44	HR	Shutter	15B-486	X	2.88	HK	Idle Speed Screw
14-423	X	0.72	HK,HU	Shutter	15C-1	X	1.52	HU	Idle Speed Screw
14-430	X	0.72	HS	Shutter	15C-3	X	2.97	HK	Idle Speed Screw
14-431	X	0.72	HS	Shutter	15C-6	X	0.97	HE	Metering Cover Screw
14-432	X	0.72	HU	Shutter	15C-9	X	1.69	HL	Idle Speed Screw
14-442	X	1.18	HK,HU	Shutter	15C-14	X	1.00	HS	Idle Speed Screw
14-444	X	1.18	TC	Shutter	15C-18	X	0.59	HL	Screw
14-445	X	0.68	HS	Shutter	15C-19	X	0.60	HS	Diaphragm Cover Screw
14-446	X	0.72	HU	Shutter	15C-20	X	0.60	HS	Idle Speed Screw
14-453	X	0.72	HU	Shutter	15C-21	X	2.04	HS	Idle Speed Screw
14-457	X	1.18	HO	Shutter	15C-24	X	4.04	HT	Idle Speed Screw
14-458	X	0.72	HS	Shutter	15C-25	X	2.21	HT	Idle Speed Screw
14-465	X	0.72	HK	Shutter	15C-29	X	2.51	HL	Screw
14-471	X	0.72	HK,HS	Shutter	15C-30	X	0.59	HS	Screw
14-476	X	0.72	HS	Shutter	15C-33	X	0.49	TC	Sealing Screw
14-485	X	0.79	HK	Shutter	15C-34	X	1.24	HU	Swivel Screw
14-491	X	0.79	HK	Shutter	15C-38	X	3.31	FO	Screw
14-498	X	0.72	HK	Shutter	15C-43	X	2.90	HR	Screw
14-499	X	0.72	HU	Shutter	15C-44	X	1.81	HS	Screw
<b>SCREWS</b>					15C-45	X	0.59	HU	Screw
15B-282	X	0.60	HL	Screw	15C-46	X	0.59	HS	Screw
15B-285	X	0.60	M	Screw	15C-50	X	0.77	HU	Screw
15B-297	Use 15-C9		M	Screw	15C-51	X	0.77	HL	Screw
15B-300	X	0.75	M	Screw	15C-52	X	0.77	HL	Screw
15B-306	X	0.60	M	Screw & Lockwasher	15C-53	X	0.77	HS	Metering Cover Screw
15B-307	Use 15C-20				15C-54	X	0.77	HS	Metering Cover Screw
15B-313	X	0.60	HL	Screw	15C-55	X	3.32	HS	Screw
15B-318	X	0.62	HL	Screw	15C-58	X	7.47	HS	Screw
15B-321	X	0.62	HL	Screw & Lockwasher	15C-59	X	3.20	HS	Screw
15B-322	X	0.60	FS	Screw	15C-65	X	3.47	HU	Screw
15B-325	X	0.59	HL	Screw					

PART NO.	QTY CODE	LIST PRICE	USAGE	DESCRIPTION	PART NO.	QTY CODE	LIST PRICE	USAGE	DESCRIPTION
<b>GASKETS</b>					24B-326	X	0.50	HS	Throttle Ret. Spring
16B-179	X	0.49	M	Gasket	24B-328	X	0.75	HK	Throttle Ret. Spring
16B-180	X	0.49	TC	Gasket	24B-331	X	0.50	HK,HS	Mixture Screw Spring
16B-184	X	0.49	HS	Gasket	24B-344	X	0.69	HL	Throttle Ret. Spring
16B-199	X	0.49	HL	Inlet Seat Gasket	24B-345	X	1.10	HS,HL	Inlet Tension Spring
16B-204	X	0.49	HL	Gasket	24B-355	Use 24C-263			
16B-205	X	0.49	HL	Strainer Gasket	24B-365	X	0.59	HS	Spring
16B-206	X	0.49	HL	Flange Gasket	24B-368	X	0.59	HU	Inlet Tension Spring
16B-212	X	0.49	HL	Strainer Gasket	24B-369	X	0.74	HK,HS,HU	Inlet Tension Spring
16B-216	X	0.49	HL	Flange Gasket	24B-371	X	0.71	HS	Spring
16B-217	X	0.49	HL	Diaphragm Gasket	24B-372	X	0.60	HK,HL	Inlet Tension Spring
16B-223	X	0.49	HL	Fuel Pump Gasket	24B-374	X	0.74	HK,HS	Inlet Tension Spring
16B-225	X	0.49	HL	Gasket	24B-376	X	0.93	HU	Throttle Ret. Spring
16B-226	X	0.49	HS	Diaphragm Gasket	24B-377	X	0.81	HU	Inlet Tension Spring
16B-227	X	0.49	HS	Fuel Pump Gasket	24B-378	X	0.79	HS,HU	Inlet Tension Spring
16B-228	X	0.49	HS	Flange Gasket	24B-381	X	0.84	HL	Throttle Ret. Spring
16B-243	X	0.49	HS	Flange Gasket	24B-397	X	0.82	HU	Throttle Ret. Spring
16B-246	X	0.49	HU	Diaphragm Gasket	24B-404	X	1.05	TC	Throttle Ret. Spring
16B-247	X	0.49	HU	Fuel Pump Gasket	24B-418	X	0.83	HK,HS	Inlet Tension Spring
16B-248	X	0.49	HU	Flange Gasket	24B-434	X	0.59	HS	Throttle Ret. Spring
16B-249	X	0.49	HS	Flange Gasket	24B-435	X	0.42	HS	Throttle Return Spring
16B-252	X	0.51	HL	Gasket	24B-437	X	0.79	HS	Throttle Return Spring
16B-253	X	0.49	HL	Inlet Valve Gasket	24B-444	X	0.83	HK	Throttle Return Spring
16B-272	X	0.49	HK	Fuel Pump Gasket	24B-447	X	0.79	HS	Throttle Return Spring
16B-273	X	0.49	HK	Diaphragm Gasket	24B-449	X	0.50	HS	Mixture Screw Spring
16B-274	X	0.49	HK	Flange Gasket	24B-450	X	0.59	HS	Mixture Screw Spring
16B-275	X	0.49	HK	Module Gasket	24B-474	X	0.96	HK	Throttle Return Spring
16B-277	X	0.49	HK	Gasket	24C-15	X	0.80		
16B-279	X	0.49	HK	Module Gasket	24C-29	X	0.77	HS	Throttle Ret. Spring
16B-291	X	0.69	HL	Gasket	24C-141	X	0.84	HS	Choke Ret. Spring
16B-294	X	1.03	HK	Module Gasket	24C-146	X	0.87	HU	Throttle Ret. Spring
16B-295	X	0.49	HK	Module Gasket	24C-219	X	0.70		
16B-314	X	0.49	HK	Module Gasket	24C-226	X	2.07	HT	Throttle Return Spring
16B-330	X	0.49	HL	Gasket	24C-228	X	0.75	HS	Choke Valve Spring
16B-352	X	0.49	HL	Fuel Pump Gasket	24C-229	X	0.66	TC	Choke Ret. Spring
16B-376	X	0.49	HT	Flange Gasket	24C-233	X	0.74	WB	Choke Return Spring
16B-378	X	0.49	HU	Flange Gasket	24C-234	X	1.07	WB	Throttle Ret. Spring
16B-383	X	0.49	HU	Diaphragm Gasket	24C-239	X	1.14		
16B-390	X	0.49	HS	Diaphragm Gasket	24C-235	X	0.74	WB	Throttle Return Spring
16B-406	X	0.73	HW	Diaphragm Gasket	24C-244	X	0.74	WB	Throttle Return Spring
16B-407	X	2.29	HW	Fuel Pump Gasket	24C-246	X	1.11	FO	Throttle Return Spring
<b>SPRINGS</b>					24C-248	X	0.74	HU	Spring
24B-131	X	0.42	HL	Mixture Screw Spring	24C-250	X	1.35	HU	Spring
24B-247	X	0.51	HO	Idle Speed Reg. Spring	24C-251	X	0.62	HS	Spring
24B-281	X	0.68	HE	Choke Friction Spring	24C-252	X	0.62	HS	Spring
24B-289	X	0.73	HL	Inlet Tension Spring	24C-257	X	0.87	HU	Spring
24B-291	X	0.51	HL	Throttle Ret. Spring	24C-259	X	0.85	HU	Spring
24B-298	X	0.51	HS	Mixture Screw Spring	24C-261	X	0.85	HU	Spring
24B-299	X	0.54	HL,HS	Inlet Tension Spring	24C-262	X	0.85	HU	Spring
24B-305	X	0.84	HS	Throttle Ret. Spring	24C-263		0.85	HU	Spring
24B-322	X	0.50	HS	Throttle Ret. Spring	24C-264	X	1.13	HS	Spring
24B-323	X	0.63	HL	Inlet Tension Spring	24C-265		0.89	HS	Spring
					24C-266		0.89	HS	Spring
					24C-267		0.85	HS	Choke Return Spring
					24C-268		0.85	HT	Throttle Return Spring
					24C-269	X	1.11	HR	Spring

LIST					QTY				
PART NO.	QTY CODE	PRICE	USAGE	DESCRIPTION	PART NO.	CODE	LIST PRICE	USAGE	DESCRIPTION
24C-270	X	0.85	HS	Spring	26-1266		6.36	HS	Choke Shaft
24C-272	X	0.85	HS	Spring	26-1268		12.85	HT	Choke Shaft & Lever
24C-273	X	0.85	HL	Spring	26-1271		3.97	HS	Choke Shaft & Lever
24C-274	X	0.85	HS	Spring	26-1272		4.84	HS	Choke Shaft & Lever
24C-275	X	0.85	HL	Spring	26-1274		4.84	HS	Choke Shaft & Lever
24C-276	X	1.03	HU	Spring	26-1279		5.33	HS	Choke Shaft & Lever
24C-279	X	1.35	HS	Spring	26-1280		4.74	HS	Choke Shaft & Lever
24C-280	X	1.35	HS	Spring	26-1282		5.97	HS	Choke Shaft & Lever
24C-281	X	1.35	HS	Spring	26-1283		18.60	TC	Choke Shaft & Lever
<b>CHOKE LEVER</b>					26-1288		5.31	HS	Choke Shaft & Lever
25-392		1.14	HL	Choke Lever	26-1290		16.62	FO	Choke Shaft & Lever
25-425		0.48	HS	Choke Lever	26-1291		8.31	HE	Choke Shaft & Lever
25-427		0.62	HS	Choke Lever	26-1292		8.05	HS	Choke Shaft & Lever
25-457		0.77	HS	Choke Lever	26-1298		5.31	HS	Choke Shaft & Lever
25-458		0.79	HK	Choke Lever	26-1300		5.38	HS	Choke Shaft
25-469		0.48	HS	Choke Lever	26-1301		5.38	HS	Choke Shaft
25-471		4.24	HT	Choke Lever	26-1304		5.55	HS	Choke Shaft
25-474		1.16	HS	Choke Valve Lever	26-1307		7.76	HS	Choke Shaft
25-497		0.66			26-1308		5.50	HS	Choke Shaft
25-498		6.38	HS	Idle Lever	26-1309		5.54	HS	Choke Shaft
25-696		2.95	HL	Choke Lever	26-1310		11.10	HS	Choke Shaft
<b>CHOKE SHAFT</b>					26-1311		5.48	HS	Choke Shaft
26A-194		7.18	HL	Choke Shaft	<b>CHOKE SHUTTER</b>				
26A-212		7.18	HS	Choke Shaft	27-289	X	3.52	TC	Choke Shutter
26A-215		7.18	HS	Choke Shaft	27-296	X	0.76	HL,HS	Shutter
26A-219		7.18	HS	Choke Shaft	27-308	X	1.33	HL,HS	Shutter
26-461		8.33	HL	Choke Shaft	27-309	X	0.96	HL,HS	Shutter
26-955		10.42	HL	Shaft & Lever	27-310	X	0.83	HS	Shutter
26-977		12.07	HL	Shaft & Lever	27-311	X	0.82	HL	Choke Shutter
26-1003		6.94	HS	Shaft & Lever	27-316	X	3.25	HL	Shutter
26-1012		15.10	HL	Shaft & Lever	27-320	X	0.71	HK,HS	Shutter
26-1013		9.57	HL	Choke Shaft	27-327	X	0.83	HO	Choke Shutter
26-1020		10.74	HL	Shaft & Lever	27-329	X	1.11	HS	Shutter
26-1036		11.31	HL	Shaft & Lever	27-331	X	0.71	HS	Shutter
26-1037		8.01	HS	Shaft & Lever	27-333	X	0.83	WB	Choke Shutter
26-1041		6.72	HS	Shaft & Lever	27-334	X	0.83	WB	Choke Relief Valve
26-1089		6.50	HO	Choke Shaft & Lever	27-342	X	0.91	HS	Shutter
26-1124		24.15	HS	Shaft & Pin Assembly	27-352	X	1.07	HK	Shutter
26-1135		6.70	HS	Shaft & Lever	27-360	X	0.95	HT	Choke Shutter
26-1139		9.42	HS	Shaft & Lever	27-361	X	0.83	HO	Choke Shutter
26-1193		4.49	HS	Choke Shaft & Lever	27-363	X	0.83	WB	Choke Shutter
26-1196		6.90	HK	Choke Shaft & Lever	27-365	X	0.89	FO	Choke Shutter
26-1212		5.72	HS	Choke Shaft & Lever	27-366	X	0.81	WB	Choke Shutter
26-1238		6.45	HS	Choke Shaft & Lever	27-369	X	0.78	HS	Choke Shutter
26-1239		4.65	HS	Choke Shaft & Lever	27-370	X	0.78	HS	Choke Shutter
26-1242		4.83	HK	Choke Shaft & Lever	27-372	X	0.78	HS	Choke Shutter
26-1247		4.25	HL	Choke Shaft & Lever	27-373	X	0.78	HS	Shutter
26-1251		5.28	HS	Choke Shaft & Lever	27-374	X	0.78	HS	Shutter
26-1258		17.37	HT	Choke Shaft & Lever	27-375	X	0.78	HS	Shutter
26-1260		3.73	HS	Choke Shaft & Lever	27-376	X	0.80	HL	Choke Shutter
26-1262		4.40	HS	Choke Shaft & Lever					
26-1264		5.08	HS	Choke Shaft & Lever					
26-1265		8.26	HK	Choke Shaft & Lever					

PART NO.	QTY CODE	LIST PRICE	USAGE	DESCRIPTION	PART NO.	LIST PRICE	USAGE	DESCRIPTION	
<b>SWIVEL</b>					<b>MIXTURE SCREWS</b>				
28-124		3.14	HL	Connection Wire	43A-2	5.68	HU	Mixture Screw	
28-127		5.54	HL	Connection	43A-9	2.43	HS	Mixture Screw	
28-132		8.14	HL	Connection Wire	43A-19	4.61	HS	Mixture Screw	
28-162		3.55	HU	Cable Pull Swivel	43A-20	4.09	HS	Mixture Screw	
28-164		3.65	HL	Swivel	43A-21	4.79	HS	Mixture Screw	
28-172		2.65	HO	Connection Wire	43A-25	4.26	HU	Mixture Screw	
28-176		2.11	HS	Swivel	43A-28	3.70	HS	Mixture Screw	
28-178		1.11	FO	Connection Wire	43A-34	2.22	HS	Mixture Screw	
28-180		2.72	HS	Swivel	43A-36	3.21		Mixture Screw	
<b>CLIP</b>					43A-43	2.26	HK	Mixture Screw	
29-218	X	0.68	M	Clip	43A-45	4.61	HS	Mixture Screw	
29-220	X	0.68	HK,HS,HU	"E" Ring	43A-60	2.24	HK	Mixture Screw	
29-224	X	0.68	HS,HU	Clip	43A-63	2.32	HK	Mixture Screw	
29-226	X	0.68	HL	Throttle Clip	43A-64	2.10	HK	Adj. Screw	
29-227	X	0.68	TC/WB	"E" Ring	43A-67	2.32	HU	Mixture Screw	
29-239	X	0.68	HS	Clip	43A-70	3.82	HS	Idle Adj. Screw	
29-240	X	0.68	HU	"E" Ring	43A-71	3.82	HS	Main Adj. Screw	
<b>FULCRUM PIN</b>					43A-106	3.34	HU	Mixture Screw	
32-65	X	0.97	HO/TC/WB	Fulcrum Pin	43A-107	3.23	HU	Mixture Screw	
32-72	X	0.53			43A-108	2.07	HS	Mixture Screw	
32-78	X	0.51	HS	Fulcrum Pin	43A-118	2.73	HU	Mixture Screw	
32-79	X	0.50	HS	Fulcrum Pin	43A-120	2.96	HS,HU	Mixture Screw	
32-80	X	0.53	HL	Fulcrum Pin	43A-121	4.44	HS	Mixture Screw	
32-83	X	0.53	HK	Fulcrum Pin	43A-124	3.80	HS	Adjust Screw	
32-506	X	2.46	HL	Fulcrum Pin Assembly	43A-125	4.23	HS	Mixture Screw	
<b>INLET NEEDLE</b>					43A-127	2.46	HT	Idle Mixture Screw	
34-194	X	1.37	HL	Inlet Needle	43A-129	1.83	HU	Idle Adjust Screw	
34-195	X	1.53	HL	Inlet Needle	43A-131	2.91	HT	Main Adjust Screw	
34-202	X	1.37	HL	Inlet Needle	43A-132	3.85	HE	Idle Adjust Screw	
34-216	X	2.44	HS,HU	Inlet Needle	43A-136	2.25	HS	Main Adjust Screw	
34-219	X	2.50	HU	Inlet Needle	43A-143	4.67	HS	Main Adjust Screw	
34-220	X	3.47	HL	Inlet Needle	43A-144	3.65	HU	Idle Adjust Screw	
34-221	X	3.61	TC	Inlet Needle	43A-146	4.67	WB	Idle Adjust Screw	
34-224	X	7.53	HS	Choke Valve Inlet	43A-148	2.00	TC	Idle Adjust Screw	
<b>INLET SEAT</b>					43A-149	3.98	HE	Main Adjust Screw	
36-479		0.56	HL	Inlet Seat (insert)	43A-152	2.73	HS	High Speed Adjust Screw	
36A-27		4.06	HL	Inlet Seat	43A-157	1.50	HU	Main Adjust Screw	
36A-28		4.31	HL	Inlet Seat	43A-159	3.08	HT	Idle Adjust Screw	
36A-30		2.50	HU	Inlet Seat	43A-161	4.30	HT	Adjust Screw	
36A-33		1.91	HS	Inlet Seat	43A-163	8.38	HS	Adjust Screw	
36A-34		4.22	WB	Inlet Seat	43A-164	8.38	HS	Adjust Screw	
36A-36		5.41	TC	Inlet Seat	43A-168	8.38	HS	Adjust Screw	
36A-38		4.27	HL	Inlet Seat	43A-169	8.38	HS	Adjust Screw	
36A-39		4.22	HS	Inlet Seat	43A-172	6.22	HS	Mixture Screw	
					43A-173	6.22	HS	Mixture Screw	
					43A-176	6.22	HS	Mixture Screw	



PART NO.	QTY CODE	LIST PRICE	USAGE	DESCRIPTION	PART NO.	LIST PRICE	USAGE	DESCRIPTION
43A-177		6.22	HS	Mixture Screw	<b>NOZZLE</b>			
43A-178		6.22	HS	Mixture Screw	47A-222	4.78	FO	Main Fuel Nozzle
43A-179		6.22	HS	Mixture Screw	47A-225	4.78	TC	Main Fuel Nozzle
43A-180		6.22	HT	Mixture Screw	47A-272	4.78	HO	Main Fuel Nozzle
43A-181		6.81	HT	Mixture Screw	47A-273	4.78	WB	Main Fuel Nozzle
43A-182		6.22	HO	Mixture Screw	47A-276	4.78	HL	Main Fuel Nozzle
43A-183		6.22	HT	Mixture Screw	47A-277	4.78	TC	Main Fuel Nozzle
43A-187		6.22	HS	Mixture Screw	47A-281	5.52	TC	Main Fuel Nozzle
43A-188		6.22	HS	Mixture Screw	47A-283	4.78	WB	Main Fuel Nozzle
43A-189		8.38	HT	Mixture Screw	47A-284	4.78	FO	Main Fuel Nozzle
43A-190		6.22	HT	Mixture Screw	47A-286	4.78	HL	Main Fuel Nozzle
43A-191		6.22	HT	Mixture Screw	<b>HIGH SPEED JET</b>			
43A-192		6.22	HL	Mixture Screw	49A-161	4.16	HO/FO	Jet (.063)
43A-193		6.22	HL	Mixture Screw	49A-162	4.16	HO/FO	Jet (.057)
43A-194		6.22	HU	Mixture Screw	49A-163	4.16	HO/FO	Jet
43A-203		6.22	HL	Mixture Screw	49A-179	4.16	TC/WB	Jet (.096)
43A-206		6.22	HS	Mixture Screw	49A-181	4.16	TC/WB	Jet (.076)
43A-211		7.24	HS	Mixture Screw	49A-183	4.16	WB/TC	Jet (.088)
43-388		3.00	HL	Mixture Screw	49A-185	4.16	HL	Jet (.039)
43-391		4.08	HL	Mixture Screw	49A-186	4.16	TC/WB	Jet (.070)
43-397		2.96	HL	Main Adjust Needle	49A-187	4.16	HO/FO	Jet (.035)
43-401		3.00	HL	Mixture Screw	49A-199	4.16		Jet (.092)
43-417		5.86	HS	Mixture Screw	49A-200	4.46		Jet (.094)
43-418		2.44	HS	Mixture Screw	49A-203	4.16		Jet (.074)
43-420		2.84	HS	Mixture Screw	49A-214	4.16		Jet (.072)
43-437		2.49	HS	Mixture Screw	49A-217	4.16		Jet (.030)
43-441		2.58	TC	Idle Adjust Screw	49A-221	4.16		Jet (.090)
43-442		2.49	HS	Mixture	49A-440	2.87		
43-455		4.47	HL	Main Adjust Screw	49A-441	4.16		Main Fuel Orifice
43-479		2.38	TC	Idle Adjust Screw	49A-445	4.16		Jet (.0105)
43-486		2.86	HU	Mixture Screw	49A-446	4.16		Jet (.061)
43-489		5.44	HL	Idle Adjust Screw	49A-447	4.16		Jet
43-966		7.68	HL	Mixture Screw	49A-448	4.16		Jet
43-967		6.53	HL	Mixture Screw	49A-450	4.16		Jet (.078)
43-987		6.50	HR	Mixture Screw	49A-451	4.16		Jet (.058)
43-988		5.80	HL	Mixture Screw	49A-452	4.16		Jet
43-995		6.51	HL	Mixture Screw	49A-456	4.16		Jet (.052)
43-1034		7.47	HW	Mixture Screw	49A-458	4.16		Jet
<b>"O" RING - PACKING</b>					49A-459	4.16		Jet (.055)
44-267	X	0.71	HL	"O" Ring	49A-460	4.16		Jet (.060)
44-270	X	0.71	HL	"O" Ring	49A-466	4.16		Jet (.066)
44-277	X	0.71	HS	"O" Ring	49A-473	4.16		Jet (.041)
44-296	X	0.71	HS	"O" Ring	49A-474	4.16		Jet (.050)
44-344	X	0.71	HS	"O" Ring	49A-475	5.72		Jet
44-346	X	0.71	HS	"O" Ring	49A-483	4.89		Jet
44-347	X	0.71	HS	"O" Ring	49A-484	4.16		Jet
44-350	X	0.78	HS	"O" Ring	49A-485	4.16		Jet

PART NO.	QTY CODE	LIST PRICE	USAGE	DESCRIPTION	PART NO.	QTY CODE	LIST PRICE	USAGE	DESCRIPTION
49A-488		4.16		Jet	78A-251	X	0.65	HL	Washer
49A-490		4.16		Jet	78A-252	X	0.65	HL	Washer
49A-495		4.61		Jet	78A-253	X	0.65	M	Clip
49A-496		4.16		Jet	78A-256	X	0.65	M	Washer
49B-1		4.16		Jet					
49B-2		4.16		Jet	78A-257	X	0.65	HL	Washer
49B-3		4.16		Jet	78A-263	X	0.65	HL	Lockwasher
49B-4		4.16		Jet					
49B-5		4.16		Jet	78A-265	X	0.65	HL	Washer
49B-10		4.16		Jet	78A-266	X	0.65	HL	Washer
49B-11		4.16		Jet	78A-267	X	0.65	HT	Washer
49B-14		4.16		Jet	78A-280	X	0.65	HS	Throttle Shaft Washer
49B-18		3.06		jet	78A-335	X	0.94	HS	Washer
49B-32		4.16		Jet					
49B-37		4.16		Jet	78A-344	X	0.65	HS	Throttle Shaft Washer
49B-94		2.87		jet	78A-347	X	0.66	HS	Washer
<b>RETAINER</b>					78A-350	X	0.65	HU	Washer
55A-211	X	0.49	HL	Nozzle Check Ball Stop	78A-352	X	0.65	HS	Washer
55A-212	X	0.49	HK,HL,HS	Ring	78A-355	X	0.65	HR	Washer
55A-214	X	0.49	HL	Ch. Ball Stop Nozzle					
55A-216	X	0.49	HK,HU	Stop Check Ball	78A-356	X	0.65	HU	Spacer
55A-222	X	0.50	HS	Disc Nozzle Stop	78A-357	X	0.65	HL	Washer
55A-223	X	0.50	HK	"E" Ring	78A-358	X	0.65	HU	Washer
55A-288	X	0.50	HS	Idle Speed Screw Retainer	<b>PLUGS</b>				
55A-303	X	0.50	HT	Idle Mixture Screw Retainer	80-160		1.58	M	Cup Plug
55A-304	X	0.50	HT	High Speed Mixture Screw	80-312		1.58	HO/WB	Plug Screw
55A-305	X	0.50	HS	Adjust Screen Retainer	80-317		1.58	HL	Friction Spring
55A-306	X	0.50	HT	Retainer	80-332		1.58	HL,HU	Cup Ring
55A-307	X	1.73	TC	Retainer	80-336		1.58	HS	Reducer
<b>BUSHING</b>					80-342		1.58	HS	Plug Screw
60A-231	X	2.51	HL	Bushing	80-345		1.58	TC	Plug Screw
60A-235	X	2.79	HS	Bushing	80-352		1.58	HK	Vent Reducer
<b>FLOAT BOWL</b>					80-387		1.58	TC	Plug Screw
65-258		5.19	TC	Float Bowl	80-392		3.74	TC	Plug
65-750		12.38	TC	Float Bowl	<b>COVERS</b>				
<b>BODY STRAINER / CONNECTORS</b>					91A-250		5.52	HL	Diaphragm Cover
67-38		12.04	HL	Inlet Valve Body	91A-251		1.67	HL	Strainer Cover
68-282		4.99	HS	Straight Connector	91A-273		4.35	HS	Cover
68-283		1.52		Connector	91A-274		1.22	HS	Cover
69-165		0.79		Connector	91A-275		4.18	HL	Diaphragm
69-195		0.34	HS	Elbow Connector					
<b>WASHER</b>					91A-282		6.47	HS	Diaphragm Cover
78A-226	X	0.65	M	Washer	91A-295		3.43	HS	Diaphragm Cover
78A-243	X	0.65	M	Washer	91A-300		0.87	HU	Diaphragm Cover
78A-245	X	0.65	M	Washer	91A-302		2.76	HS	Diaphragm Cover
78A-247	X	0.65	M	Lockwasher	91A-303		9.68	HL	Diaphragm Cover
78A-249	Use 78-A251		HL	Washer	91A-311		0.87	HU	Diaphragm Cover
78A-250	X	0.65	HL	Throttle Lever Lockwasher	91A-315		7.43	HU	Diaphragm Cover
					91A-344		2.58	HK	Diaphragm Cover
					91A-351		2.58	HL	Cover

PART NO.	QTY CODE	LIST PRICE	USAGE	DESCRIPTION	PART NO.	QTY CODE	LIST PRICE	USAGE	DESCRIPTION
91A-352		2.85	HS	Diaphragm Cover	<b>SLEEVE</b>				
91A-370		2.82	HU	Pump Cover	102-201	X	0.81	HL	Insulator Sleeve
91A-373		1.34	HK	Diaphragm Cover	102-204	X	0.81	HS	Sleeve
91A-467		1.76	HU	Pump Cover	102-208	X	0.81	HK	Throttle Shaft Sleeve
91B-191		3.24	HS	Diaphragm Cover (Stihl)	102-212	X	0.81	HS	Choke Valve Sleeve
91B-208		1.15	HS	Shaft Cover	<b>BRACKET</b>				
91B-213		5.51	HK	Fuel Pump Cover	136-559		14.86	HW	Cable Bracket
91B-218		6.08	HE	Fuel Pump Cover	<b>BODY</b>				
91B-223		0.76	HS	Diaphragm Cover	141-55		8.95	HL	Fuel Pump Body
91B-224		2.63	HU	Fuel Pump Cover	141-62		8.95	HL	Pump Body
91-757		8.13	HL	Diaphragm Cover	141-89		8.95	HL	Pump Body
91-761		7.73	HS	Cover	<b>INLET LEVER</b>				
91-791		10.93	HS	Pump Cover	155A-23	X	1.33	HL	Inlet Control Lever
91-897		5.72	HS	Diaphragm Cover	155A-26	X	0.68	HS	Inlet Control Lever
91-963		7.97	HT	Fuel Pump Cover	155A-27	X	0.68	HL	Inlet Control Lever
91-967		4.40	HS	Pump Cover	155A-28	X	0.68	HU	Inlet Control Lever
91-968		4.73	HS	Pump Cover	155A-29	X	0.68	HU	Inlet Control Lever
91-970		9.92	HE	Fuel Pump Cover	155A-36	X	0.68	HS	Lever
91-974		7.39	HS	Pump Cover	155A-53	X	0.85	HK	Inlet Control Lever
91-976		6.58	HS	Pump Cover	155A-68		0.68	HU	Throttle Lever
91-981		6.77	HU	Pump Cover	155A-71	X	0.68	HS	Inlet Control Lever
91-984		6.40	HU	Pump Cover	155A-72	X	0.68	HK	Lever
91-985		6.58	HS	Pump Cover	155A-75	X	4.32	HL	Lever
91-992	Use 91-1025				<b>VALVE</b>				
91-996		7.82	HS	Pump Cover	171-647		10.20	HL	Shutter
91-1000		19.40	HR	Pump Cover	<b>PLUG</b>				
91-1003		8.95	HS	Pump Cover	179-54	X	0.68	M	Welch Plug
91-1006		7.77	HS	Metering Cover	179-55	X	0.68	HL	Welch Plug
91-1008		7.77	HS	Pump Cover	179-57	X	0.68	HL	Welch Plug
91-1009		7.77	HS	Metering Cover	179-59	X	0.68	HS	Welch Plug
91-1010		7.77	HS	Pump Cover	179-60	X	0.68	HS	Welch Plug
91-1011		7.77	HS	Pump Cover	179-62	X	0.68	HU	Welch Plug
91-1025		6.77	HU	Pump Cover	179-63	X	0.68	TC/WB	Welch Plug
<b>STRAINERS</b>									
95-170	X	0.78	HL	Strainer Screen					
95-172	X	1.94	OW	Filter Element					
95-174	X	0.81	HL	Fuel Strainer Element					
95-176	X	1.02	HL	Strainer					
95-177	Use 95-233								
95-180	X	0.49	HK,HS,HU	Screen					
95-181	X	0.98	HL	Screen					
95-182	X	1.71	OW	Filter Element					
95-184	Use 95-172								
95-188	X	0.89	HS	Screen					
95-189	X	0.61	HS	Screen					
95-197	X	0.53	HK	Strainer Screen					
95-233	X	0.72	HS	Screen					
95-234	X	1.02	TC	Screen					

PART NO.	QTY CODE	LIST PRICE	USAGE	DESCRIPTION	PART NO.	QTY CODE	LIST PRICE	USAGE	DESCRIPTION
<b>MODULE PLATE</b>					<b>DIAPHRAGMS</b>				
198-305		12.79	HL	Pump Body	237-141	X	2.29		Pump Diahrprgm
198-564	P	12.41	HK	Module	237-143	X	2.14		Pump Diahrprgm
198-565	P	12.41	HK	Module	237-144	X	1.99		Pump Diahrprgm
198-566	P	12.41	HK	Module	237-149	X	5.73	HL	Pump Diaphragm
198-574	P	12.41	HK	Module	237-153	X	2.25		Pump Diaphragm
198-575	P	12.41	HK	Module	237-154	X	2.33		Pump Diaphragm
198-578		12.41	HK	Module	237-155	X	2.32		Inlet Valve Diaphragm
198-579	P	12.41	HK	Module	237-160	X	4.70	HK	
198-580	P	19.99	HL	Module	237-163	X	1.92		Pump Diaphragm
198-582	lsee 198-565				237-205	X	2.31		Pump Diaphragm
198-583	P	12.41	HK	Module	237-214	X	2.07		Pump Diaphragm
<b>BALL BEARING</b>					237-215	X	2.07		Pump Diaphragm
206-121	X	0.52	M	Ball	237-216	Jsee 237-153			
206-123	X	0.52	HS	Speed Screw Retainer	237-217	X	2.07		Pump Diaphragm
206-125	X	0.52	HS	Check Valve Ball	237-600	X	4.55		Metering Diaphragm
206-135	X	0.52	HL	Ball	237-601	X	4.36		Metering Diaphragm
<b>ADAPTOR</b>					237-604	X	4.55		Metering Diaphragm
215-52		2.45	WB	By Pass Tube	237-606	X	5.38		Metering Diaphragm
215-54		2.45	TC	By Pass Tube	237-653	X	4.48		Metering Diaphragm
215-72		2.45	FO	By Pass Tube	237-673	X	4.97		Metering Diaphragm
215-76		2.45	WB	By Pass Tube	237-673	X	4.97		Metering Diaphragm
215-77		2.69	WB	By Pass Tube	237-684	X	4.75		Metering Diaphragm
<b>INLET NEEDLE &amp; SEAT SETS</b>					237-686	X	4.36		Metering Diaphragm
233-647	P	7.02	HL	Needle & Seat	237-687	X	4.36		Metering Diaphragm
233-652	P	7.02	HL	Needle & Seat	237-697	X	7.13	HW	Metering Diaphragm
233-654	P	7.02	HL	Needle & Seat	<b>CUP</b>				
233-660	P	7.02	HL	Needle & Seat	318-15	X	1.37	HL	Cup
233-664	lsee 233-706				318-18	X	0.83	HS	Cup
233-665	P	7.02	HL	Needle & Seat	<b>LIMITER CAP</b>				
233-669	P	7.02	HL	Needle & Seat	318-32		0.72		Cap
233-672	P	12.98	HL	Needle & Seat	318-33		0.43		Cap
233-677	P	7.02	HL	Needle & Seat	318-34		0.43		Cap
233-692	P	7.02	HL	Needle & Seat	318-35		1.37		Cap
233-697	P	7.02	HL	Needle & Seat	318-39		1.37		Cap
233-703	P	7.02	HL	Needle & Seat	318-40		1.34		Cap
233-705	P	9.57	HO	Needle & Seat	318-43		1.43		Cap
233-706	P	9.68	HL	Needle & Seat	<b>GOVERNOR VALVE</b>				
233-707	P	8.87	HL	Needle & Seat	361-500		6.71	HL	Governor Valve
233-709	P	2.85	HL	Special Inlet Set	361-504		6.51	HL,HS	Governor Valve
233-710	P	8.57	HL	Needle & Seat	361-505		6.51	HS	Governor Valve
233-712	P	3.58	HL	Special Inlet Set	361-507		6.51	HS	Governor Valve
233-715	P	2.85	HL	Special Inlet Set	361-508		6.51	HL,HS	Governor Valve
					361-510		6.71	HL	Governor Valve
					361-512		6.51	HS	Governor Valve
					361-514		6.51	HS	Governor Valve
					361-516		6.71	HL	Governor Valve
					361-517		6.51	HS	Governor Valve
					361-518		6.51	HS	Governor Valve
					361-525		6.51	HS	Governor Valve
					361-528		6.51	HS	Governor Valve
					361-529		6.51	HS	Governor Valve

PART NO.	LIST PRICE	USAGE	DESCRIPTION	PART NO.	QTY CODE	LIST PRICE	USAGE	DESCRIPTION
361-530	6.51	HS	Governor Valve	363-618		7.49	HS	Check Valve (.56mm)
361-533	6.51	HS	Governor Valve	363-619		3.50	HS	Check Valve
361-534	6.51	HS	Governor Valve	363-620		3.07	HU	Check Valve
361-536	6.51	HS	Governor Valve	363-621		6.15	HT	Check Valve
361-537	6.51	HS	Governor Valve	363-623		6.04	HS	Check Valve
361-539	6.71	HT	Governor Valve	363-624		5.80	HS	Check Valve
361-541	6.71	HL	Governor Valve	363-625		5.96	HS	Check Valve
361-542	6.51	HS	Governor Valve					
361-544	6.51	HS	Governor Valve	363-626		5.96	HS	Check Valve
361-545	6.51	HS	Governor Valve	363-628		5.80	HS	Check Valve
361-546	6.71	HS	Governor Valve	363-629		5.96	HS	Check Valve
				363-630		6.15	HT	Check Valve
				363-631		5.80	HU	Check Valve
				363-632		5.80	HU	Check Valve
				363-633		6.15	HU	Check Valve
				363-640		6.15	HL	Check Valve
				363-643		5.96	HS	Check Valve
				363-644		6.15	HL	Idle Shut Off Valve
				363-649		5.80	HK	Nozzle Check Valve
				363-655		6.15	HT	Check Valve
				363-656		6.15	HS	Check Valve
<b>CHOKE VALVE ASSEMBLY</b>								
				392-501	Use 392-502			Choke Valve Assembly
				392-502		7.87	HS	Choke Valve Assembly
				392-506	P	7.87	HS	Choke Valve Assembly
				392-508	P	10.74	HU	Choke Valve Assembly
				392-509	P	7.74	HU	Choke Valve Assembly

**CHECK VALVE**
**CHOKE VALVE ASSEMBLY**

PART NO.	LIST PRICE	PART NO.	LIST PRICE	DESCRIPTION
<b>MERCURY MARINE OURBOARD FLOAT CARBURETTORS</b>		<b>FLOAT CARBURETTOR PARTS</b>		
HO - 2C	109.67	<b>WB</b>		
HO - 4A	109.67	65 - 259	5.71	Float Bowl
HO - 6B	112.48	16 - B178	0.11(ea.)	Bow Nut Gasket (2 req.)
HO - 7A	112.48	80 - 312	1.58	Bowl Nut
FO - 1D	106.02	69 - 169	1.55	Fuel Fitting ( )
FO - 3A	117.80	69 - 170	2.61	Fuel Fitting ( T )
WB - 103A	146.22	43 - A148	2.00	Idle Adj. Screw
WB - 107A	144.50	24 - B274	0.51	Idle Adj. Screw Spring
WB - 112B	147.07	32 - 65	0.97	Fulcrum Pin
WB - 113B	147.83	34 - 221	3.61	Inlet Needle
WB - 114B	144.39	<b>TC</b>		
WB - 115A	144.12	65 - 750	17.75	Float Bowl
WB - 116A	145.68	69 - 169	1.55	Float Bowl Gasket
WB - 120A	139.26	80 - 345	1.58	Bowl Nut (std.)
WB - 122B	147.00	80 - 392	7.68	Bowl Nut (+ fitting)
WB - 124B	145.68	16 - B180	0.49	Bow Nut Gasket (2 req.)
WB - 125A	146.28	32 - 65	0.97	Fulcrum Pin
WB - 127A	145.58	34 - 221	3.61	Inlet Needle
WB - 131A	146.73	<b>ATCO CYLINDER LAWNMOWER FLOAT CARBURETTOR</b>		
WB - 133A	148.14	FC - 11E	73.11	Carburettor (L53121)
WB - 134A	146.30	24 - C256	0.62	Idle speed screw spring
WB - 135A	146.30	43 - 162	1.41	Idle adj. screw
WB - 139A	144.07	24 - C255	1.75	Th. Return spring
TC - 100A	149.97	34 - 540	2.24	Inlet needle
TC - 101A	148.14	32 - 90	0.53	Fulcrum pin
TC - 102B	148.04	30 - 223	2.86	Float
TC - 103C	148.87	47 - A486	4.78	Nozzle
TC - 104A	146.12	49 - A486	1.62	Main jet
TC - 104B	146.12	80 - 393	0.33	Bowl nut
TC - 105A	145.45	16 - B389	0.52	Bowl nut gasket
TC - 107A	148.90	16 - B388	1.09	Bowl gasket
TC - 108A	140.78			
TC - 110A	145.68			
TC - 111A	148.26			
TC - 111B	148.26			
TC - 112A	143.49			
TC - 119A	146.30			
TC - 121A	145.68			
TC - 124A	147.07			
TC - 125A	147.07			
TC - 130A	144.42			
TC - 131A	144.42			
TC - 134A	146.22			
TC - 135A	146.22			
TC - 137A	141.79			
TC - 138A	143.30			
TC - 139A	143.30			